

# BATTERY CHARGING Locker

## Settings - Digital Pincode Lock



Function	Mode		Key sequence			Notes
	Public	Private	Step 1	Step 2	Step 3	
<b>MASTER CODE FUNCTIONS - FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW</b>						
Change master code	X	X	[logo][old master code]	01	[new master code][new master code]	Master code is eight digits
Change user code		X	[logo][master code]	02	[new master code][new master code]	User code is four digits
Delete user code	X		[master code]			Opens locks and deletes user code
Set/change sub-master code	X	X	[logo][master code]	03	[new sub-master code]	Sub-master code is six digits
Delete sub-master code	X	X	[logo][master code]	07		Deletes sub-master code
Open lock	X	X	[master code]			Deletes user code in public mode
Close lock		AUTO				Re-locks automatically after 4 seconds
Set public mode		X	[logo][master code]	08		Deletes all existing users codes
Set private mode	X		[logo][master code]	09	[new user code]	Deletes all existing users codes
Set technician code	X		[logo][master code]	10	[new technician code]	Technician code is six digits
Remove technician code	X		[logo][master code]	11		Deletes technician code
Set audible buttons on	X	X	[logo][master code]	12		Unit will beep on each button press
Set audible buttons off	X	X	[logo][master code]	13		Unit will operate silently
Set alarm mode on & set time		X	[logo][master code]	14	[time code]	Switched version only see notes on the times below
Set alarm mode off		X	[logo][master code]	15		Switched version only
Set auto-timed unlock on & set time	X		[logo][master code]	16	[time code]	See notes on timers below
Set auto-timed unlock off	X		[logo][master code]	17		Unit will no longer open automatically
Set coin lock mode on	X		[logo][master code]	18		Switched version only
Set coin lock mode off	X		[logo][master code]	19		Switched version only
Set auto-timed code cancel on & set time	X		[logo][master code]	26	[time code]	Disables user code after set time - see notes on timers
Set auto-timed code cancel off	X		[logo][master code]	27		Unit will no longer cancel user code
<b>SUB-MASTER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW</b>						
Change user code		X	[logo][sub-master code]	02	[new user code]	User code is four digits
Change sub master code	X	X	[logo][sub-master code]	03	[new sub-master code]	Sub-master code is six digits
Delete user code	X		[sub-master code]			Opens locks and deletes user code
Open lock	X	X	[sub-master code]			Deletes user code in public mode
Close lock		AUTO				Re-locks automatically after 4 seconds
<b>USER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW</b>						
Change user code		X	[logo][old user code]	02	[new user code][new user code]	User code is four digits
Open lock	X	X	[user code]			
Close lock	X		[user code]			When single user code entry mode is set
Close lock	X		[user code][user code]			When double user code entry mode is set
Close lock		AUTO				Re-locks automatically after four seconds
<b>TECHNICIAN CODE FUNCTIONS</b>						
Open lock	X		[technician code]			Does not delete user code
Close lock		AUTO				Re-locks automatically after four seconds
<b>FUNCTIONS AVAILABLE TO ALL CODES</b>						
Batterij check	X	X	[logo][logo]			Replace batteries if red light shows

NOTES	TIMER FUNCTIONS	TIME CODE EXAMPLES	BATTERY CONDITION INDICATOR	
All acceptable button presses are signified by a green light	Time code	001	1 min	Four green lights - excellent
	Time code	010	10 mins	Three green lights - very good
Incomplete functions 'time out' after 4 seconds	Time code	030	1/2 hr	Two green lights - good
	Time code	060	1 hr	One green light - low
Errors and 'time outs' are signified by flashing red light	Time code	480	8 hrs	Red light - change batteries as soon as possible
	Time code	720	12 hrs	
Following an error or 'time out' unit reverts to previous settings	Time code	999	16 hrs 39 min (maximum)	Flashing red light prior to lock or unlock indicates low battery voltage change batteries as soon as possible
Time codes are 3-digit codes corresponding to the number of units	All times are approximate: +/- 10%			

**Master code (8 digits):** \_\_\_\_\_  
**Sub mater code (6 digits):** \_\_\_\_\_  
**User code (4 digits):** \_\_\_\_\_