







MANUAL 2Park Up frame

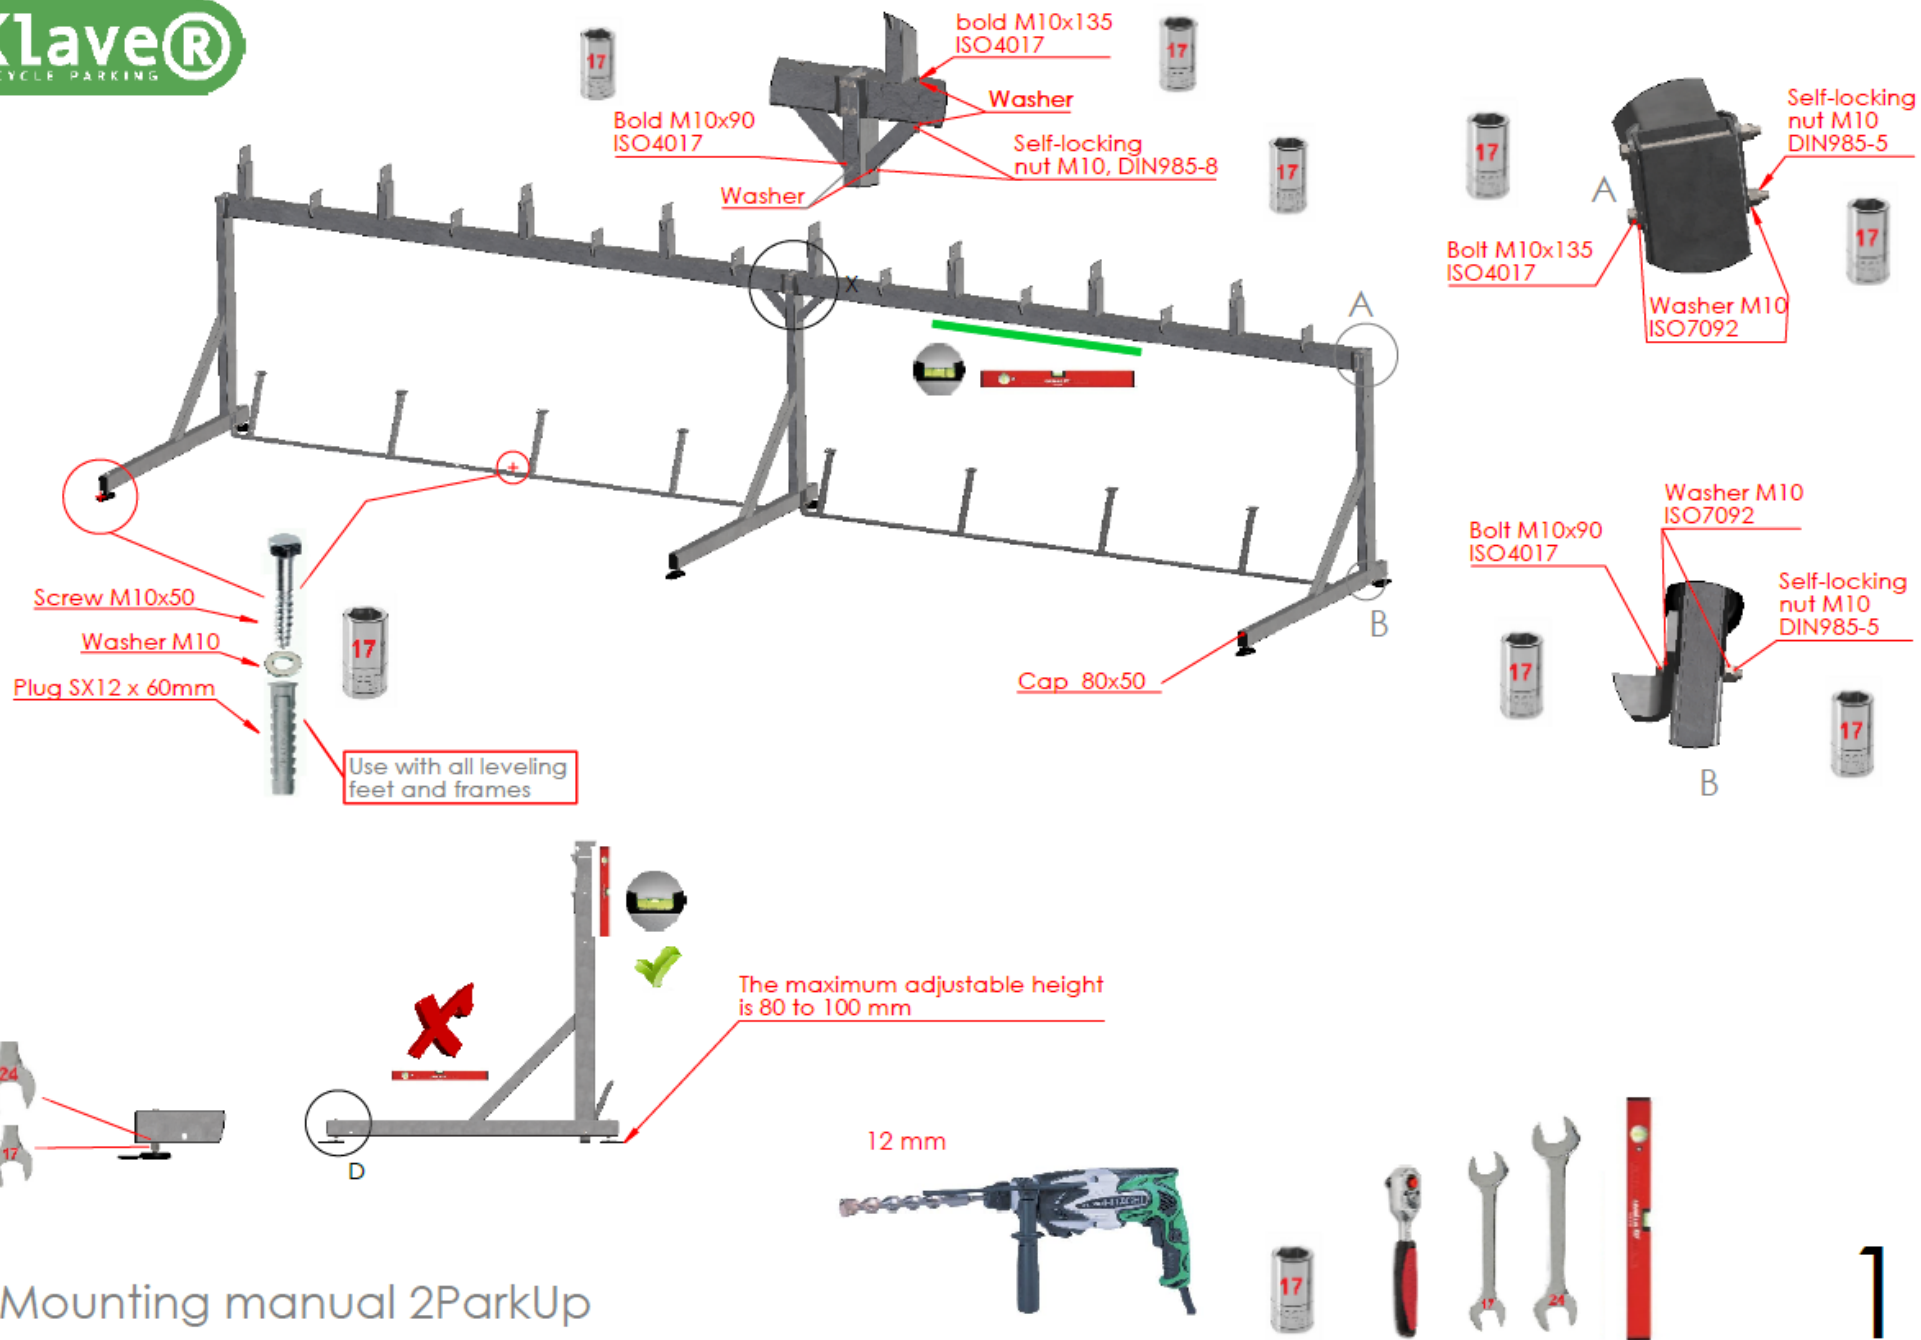

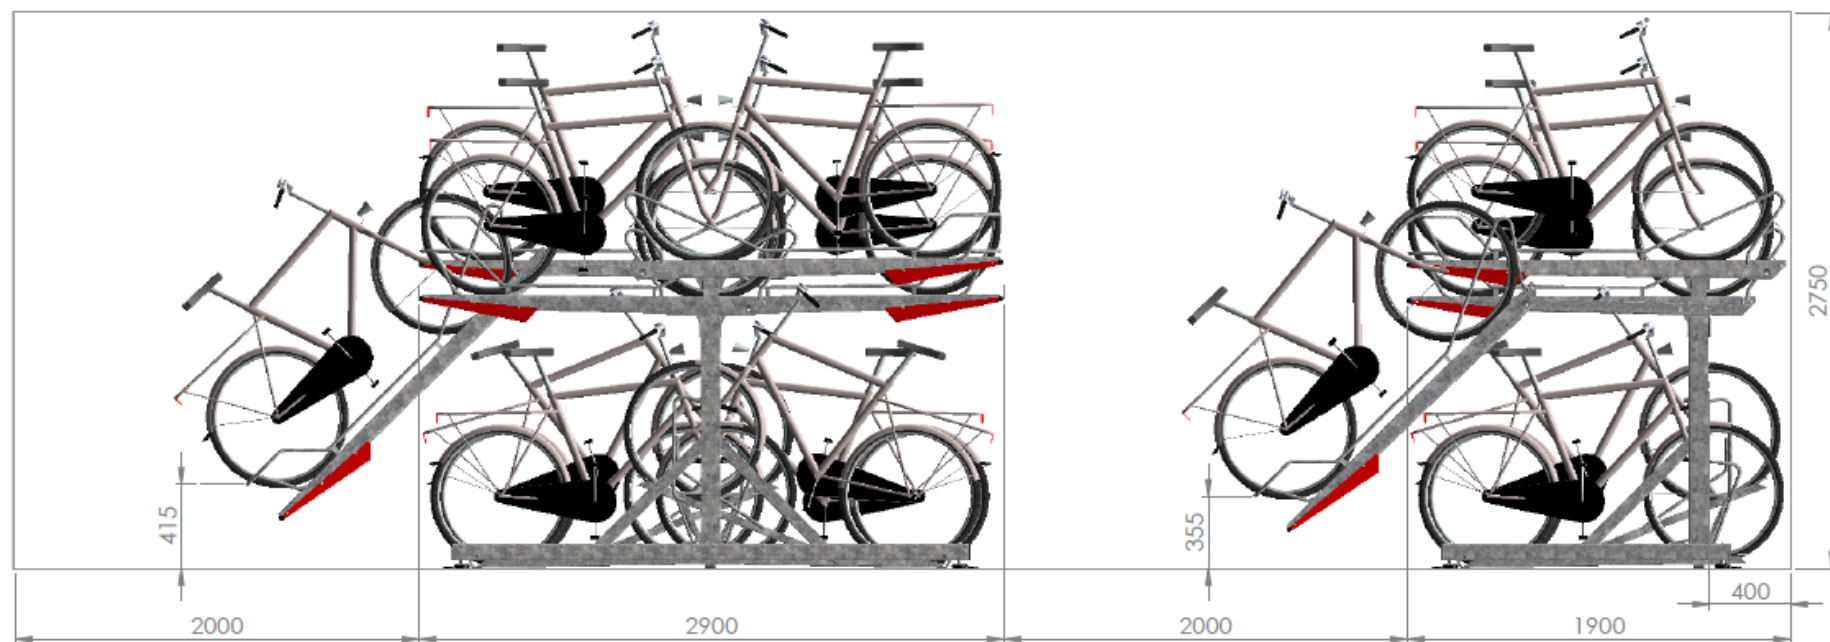





2ParkUp AWB Side view

(maten in mm)

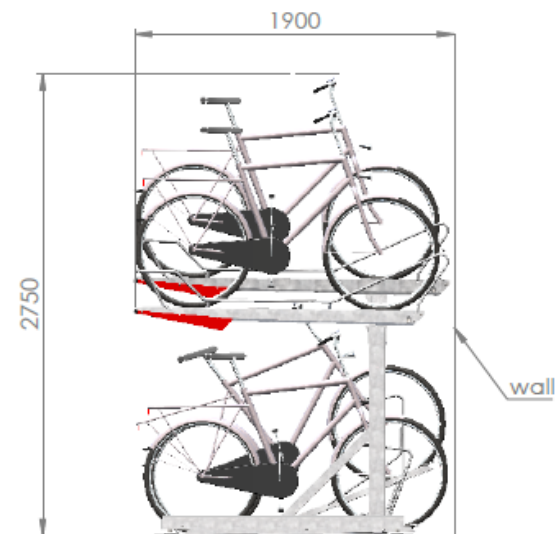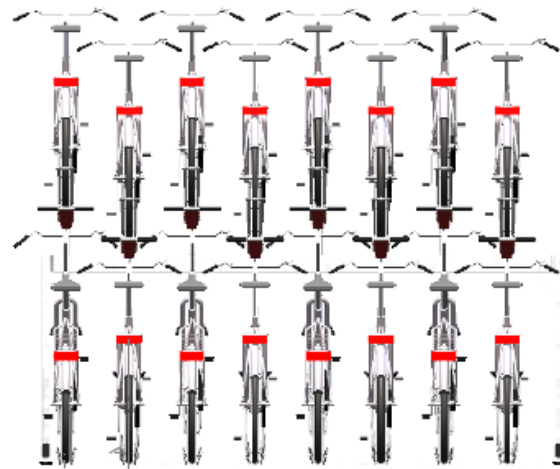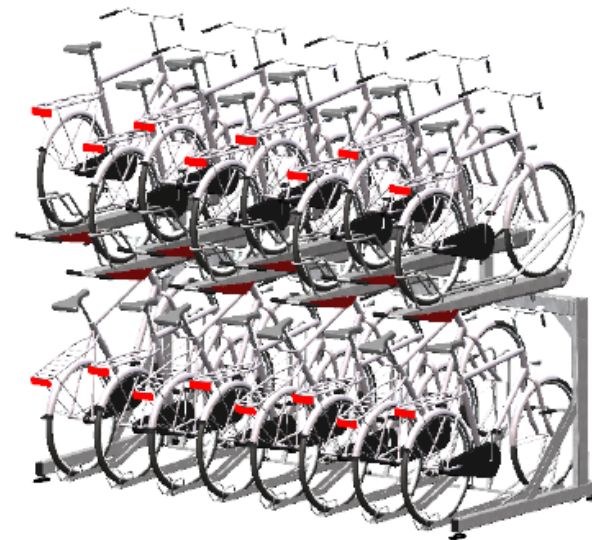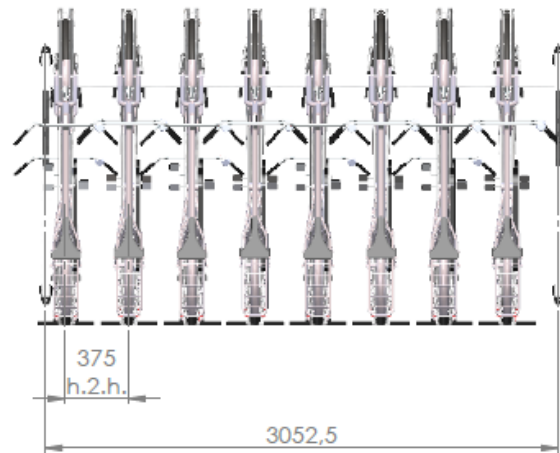





2ParkUp AWB, h.2.h. 375 16 bp single-sided

(measurements in mm)

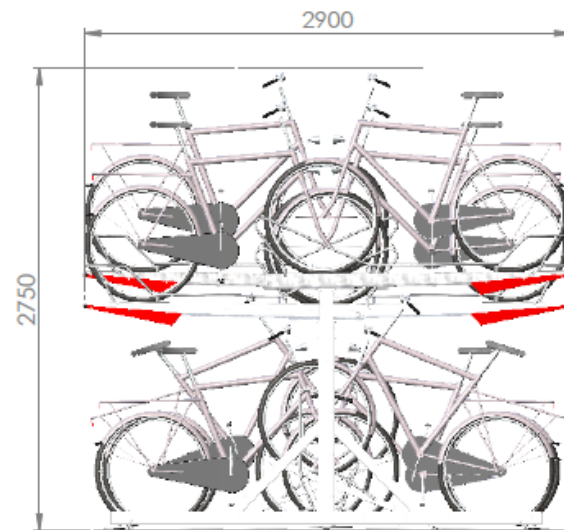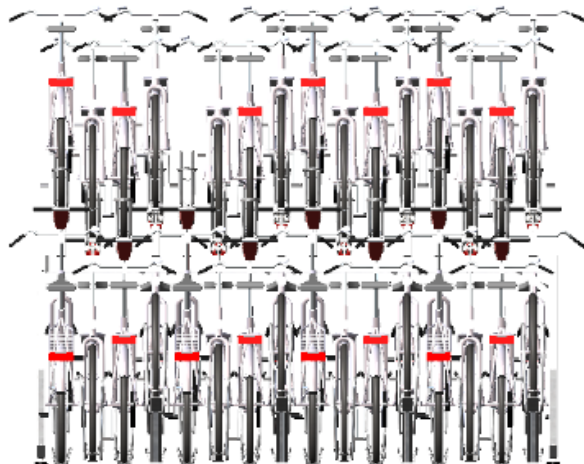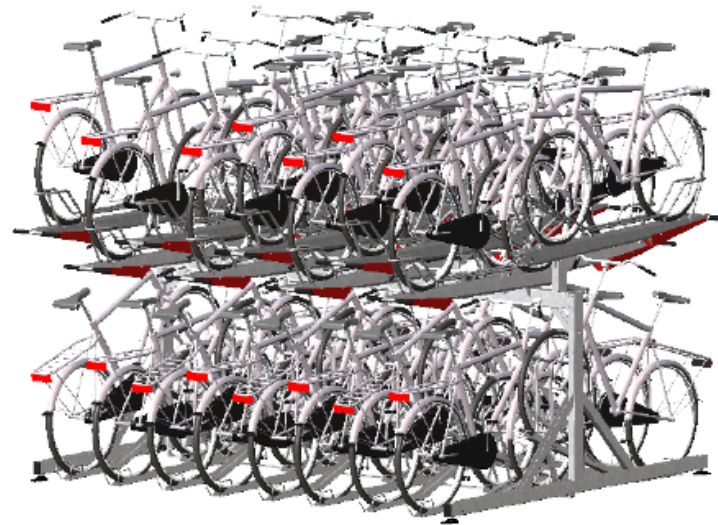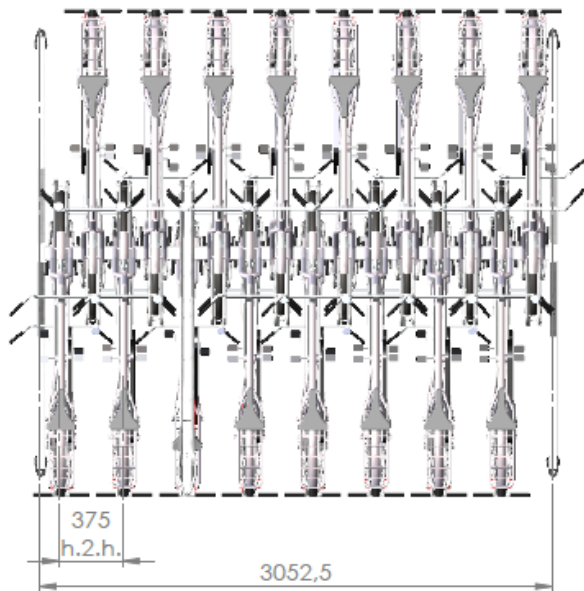





2ParkUp AWB, h.2.h. 375 32 bp double-sided

(measurements in mm)

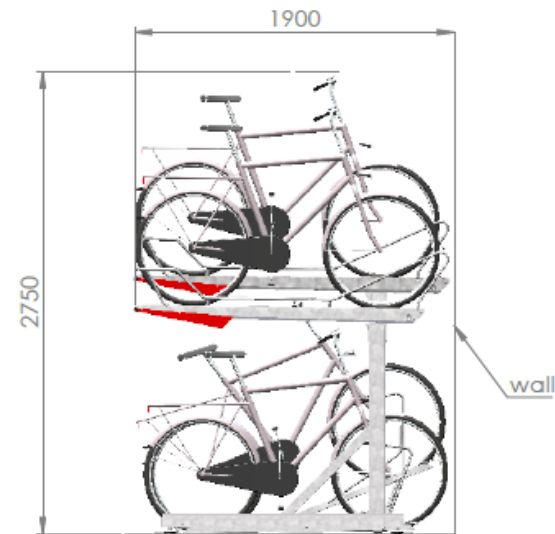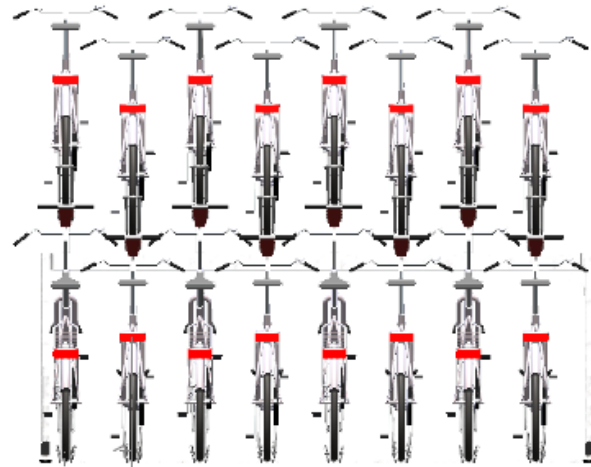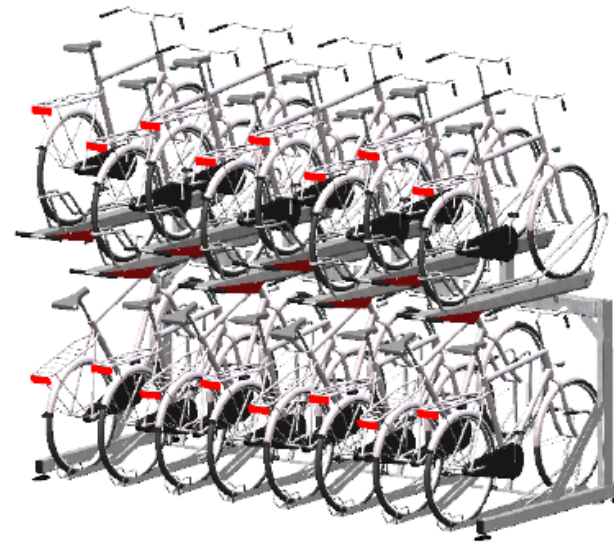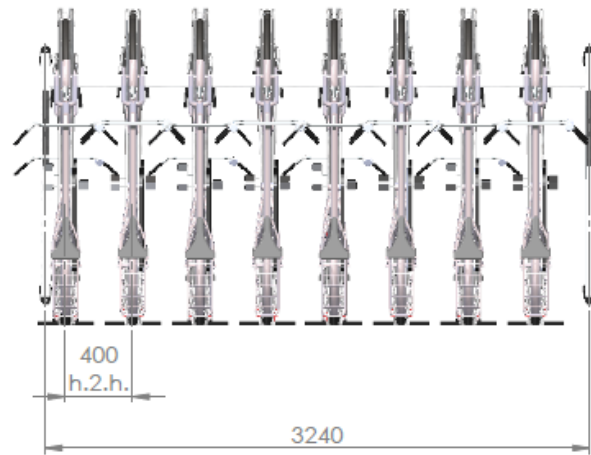

2ParkUp AWB, h.2.h. 400 16 bp single-sided

(measurements in mm)

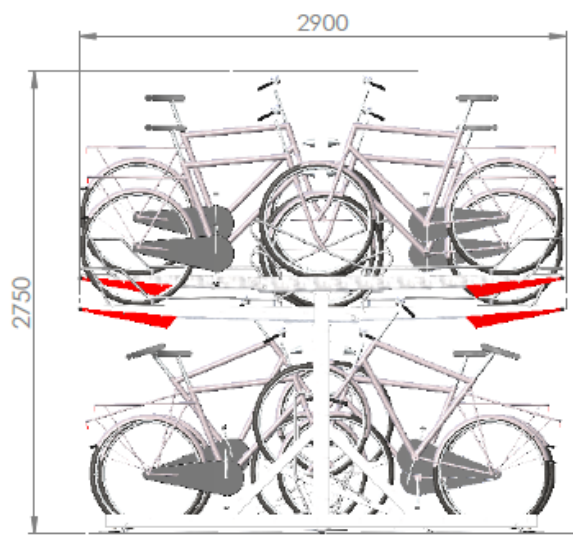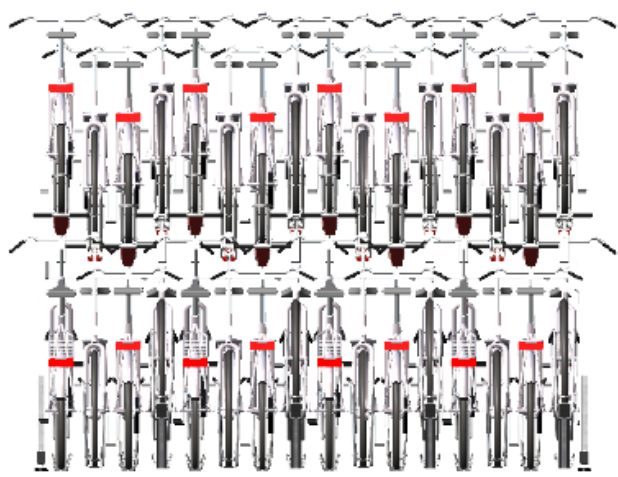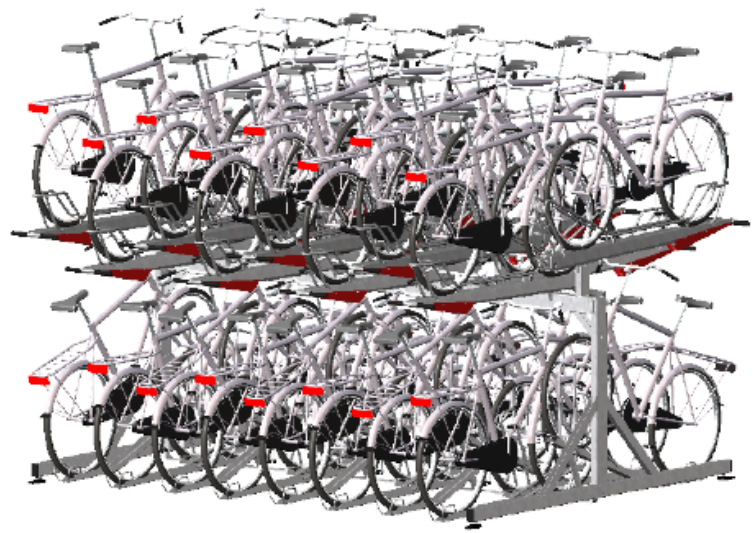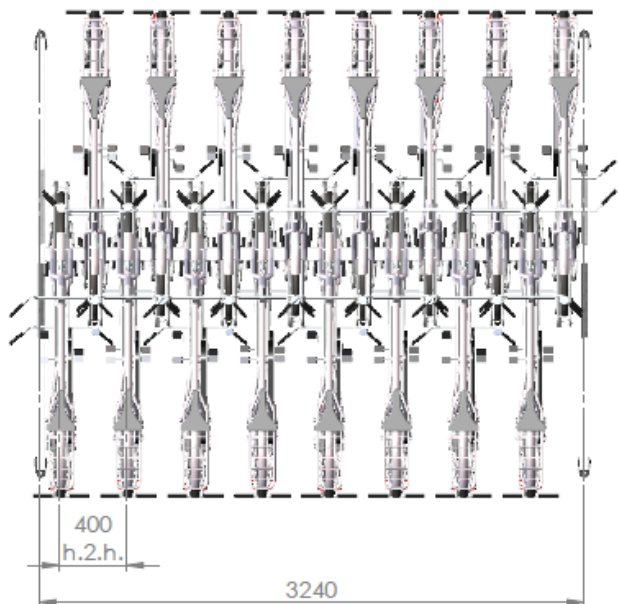


2ParkUp AWB, h.2.h. 400 32 bp double-sided

(measurements in mm)


Manual per bicycle place high & low

Bolt M10x30
Washer

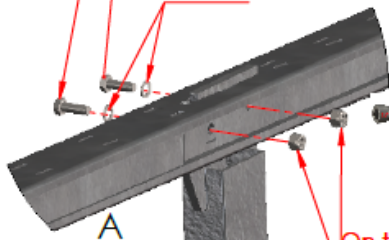


A

On this side only
M10 lock nut

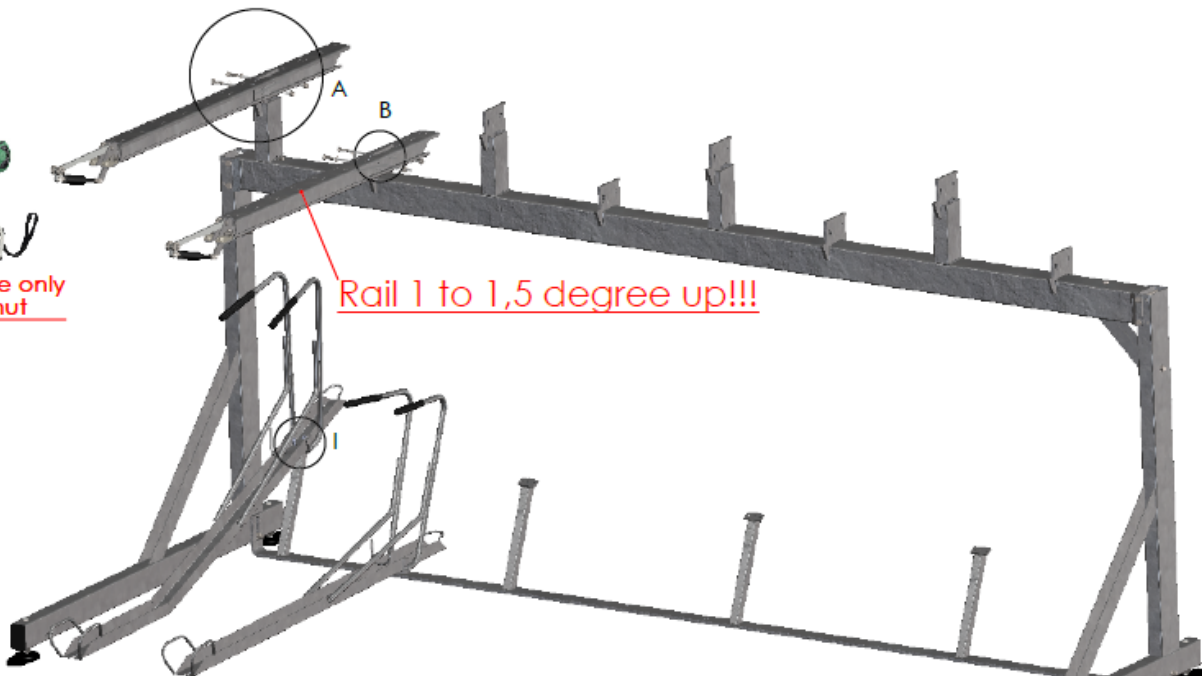

Rail 1 to 1,5 degree up!!!

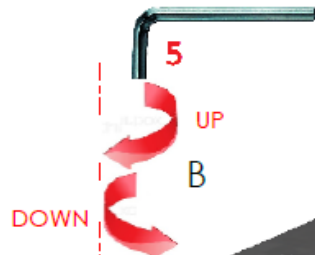


5

UP

DOWN


B

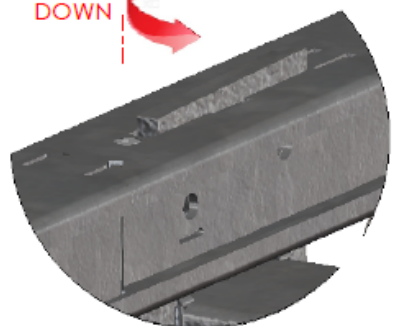

PZ.4



2x Bolt DIN7500
CM8x20
for each gutter

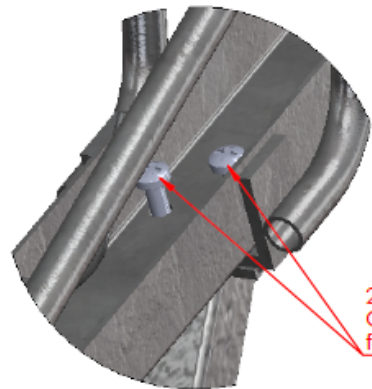

1

